


# SPIREX

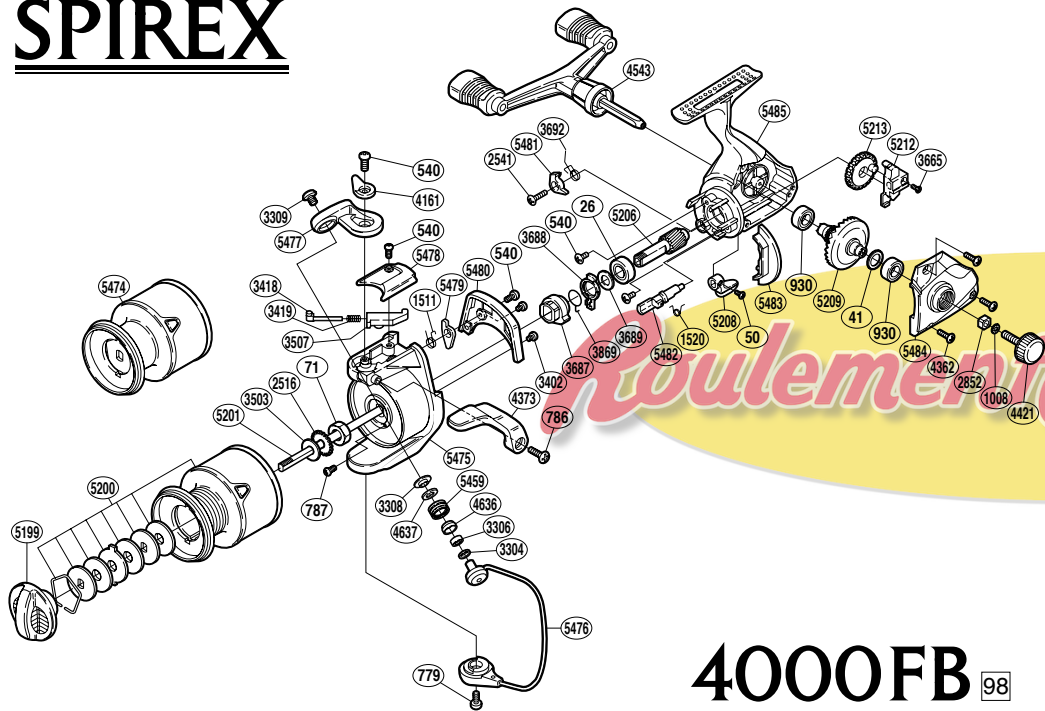

## 4000FB 98

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	3418	Bail Spring Guide (A)	5206	Pinion Gear
0041	Drive Gear Washer	3419	Bail Spring	5208	Anti-Reverse Lever
0050	Anti-Reverse Lever Screw	3503	Spool Washer	5209	Drive Gear
0071	Rotor Nut	3507	Bail Spring Guide (B)	5212	Oscillating Slider
0540	Multi-Purpose Screw	3665	Slider Retainer Screw	5213	Oscillating Gear
0779	Bail Hold Support Screw	3687	Anti-Reverse Ratchet	5459	Line Roller
0786	Trigger Screw	3688	Anti-Reverse Lock Out	5474	Spool Assembly (graphite)
0787	Nut Lock Screw	3689	Bushing Washer	5475	Rotor
0930	Ball Bearing	3692	Anti-Reverse Pawl Spring	5476	Bail Assembly
1008	Handle Lock Washer	3869	Anti-Reverse Lock Out Spring	5477	Bail Arm
1511	Lever Spring	4161	Trigger Cam	5478	Bail Spring Cover
1520	Anti-Reverse Cam Spring	4362	Side Cover Screw	5479	Bail Trip Lever
2516	Spool Support	4373	Quick-Fire II Trigger	5480	Counterbalance Cover
2541	Anti-Reverse Pawl Screw	4421	Handle Screw Cap	5481	Anti-Reverse Pawl
2852	Handle Screw Lock	4543	Double Paddle Handle Assembly	5482	Anti-Reverse Cam
3304	Bearing Spacer	4636	Line Roller Bushing	5483	Side Cover Flange
3306	Line Roller Bearing	4637	Line Roller Spacer	5484	Side Cover
3308	Line Roller Washer	5199	Drag Knob	5485	Body
3309	Line Roller Screw	5200	Spool Assembly (aluminum)		
3402	Cover Screw	5201	Main Shaft		