



BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0042	Line Guide Pawl	1852	Drag Washer (B-2)	1972	Click Spring
0133	"E" Lock	1853	Key Washer (A)	1974	Click Switch Washer
0191	Clutch Bar Support Screw	1854	Eared Washer (B-1)	1976	Click Shaft
0194	Ball Bearing	1856	Drag Washer (A)	2050	Clutch Cam Retainer
0425	"E" Lock	1917	Handle Assembly	2071	Star Drag
0609	Multi-Purpose Screw	1920	Roller Clutch Inner Tube	2073	Return Pin Guide
0664	Spacer B	1921	Cast Control Cap	2074	Drive Gear
0682	Thumb Rest Screw	1922	Cast Control Spacer	2075	Drive Shaft
0686	"E" Lock	1923	Left Side Plate Nut	2076	Pinion Gear
0689	Left Side Plate Screw	1927	Anti-Reverse Ratchet	2077	Yoke
0770	Handle Nut Plate Screw	1930	Clutch Cam Screw	2078	Retractor Spring
0799	Friction Washer	1937	Line Guide Assembly	2079	Clutch Cam
0816	Shaft Washer	1940	Frame Nut	2080	Clutch Pawl
0819	Drive Shaft Bushing	1941	Stand Screw	2081	Clutch Pawl Spring
0830	Spacer (optional)	1942	Stand Bolt	2082	Set Plate
1133	Yoke Spring	1948	Brake Collar	2083	Clutch Plate
1201	Retractor Spring Collar	1949	Right Side Plate Screw	2084	Left Side Frame
1227	Push Nut (SPN-2)	1956	Drain	2085	Brake Case
1239	Pawl Cap	1957	Worm Bushing (B)	2086	Clutch Bar Guide
1245	Clutch Bar Support Spacer	1960	Right Side I.D. Plate	2087	Quick-Fire II Clutch Bar
1354	Click Switch Screw	1961	Frame Bar	2090	Left Side Plate Assembly
1455	Drag Spring Washer (H)	1962	Thumb Rest	2091	Right Side Frame
1613	Drag Spring Washer (L)	1963	Level Wind Guard	2092	Click Plate
1618	Key Washer (C)	1965	Idle Gear (A)	2093	Click Switch Spring
1620	Eared Washer	1966	Stand	2094	Click Switch
1692	Handle Nut Plate	1967	Clutch Bar Support	2095	Click Pawl
1697	Spool Tension Spring	1968	Idle Gear (B) Shaft	2096	Right Side Plate
1788	Handle Nut	1969	Idle Gear (B)	2097	Worm Bushing (A)
1851	Drag Washer (C)	1971	Worm Shaft	2101	Spool Assembly