


# APERTO XT

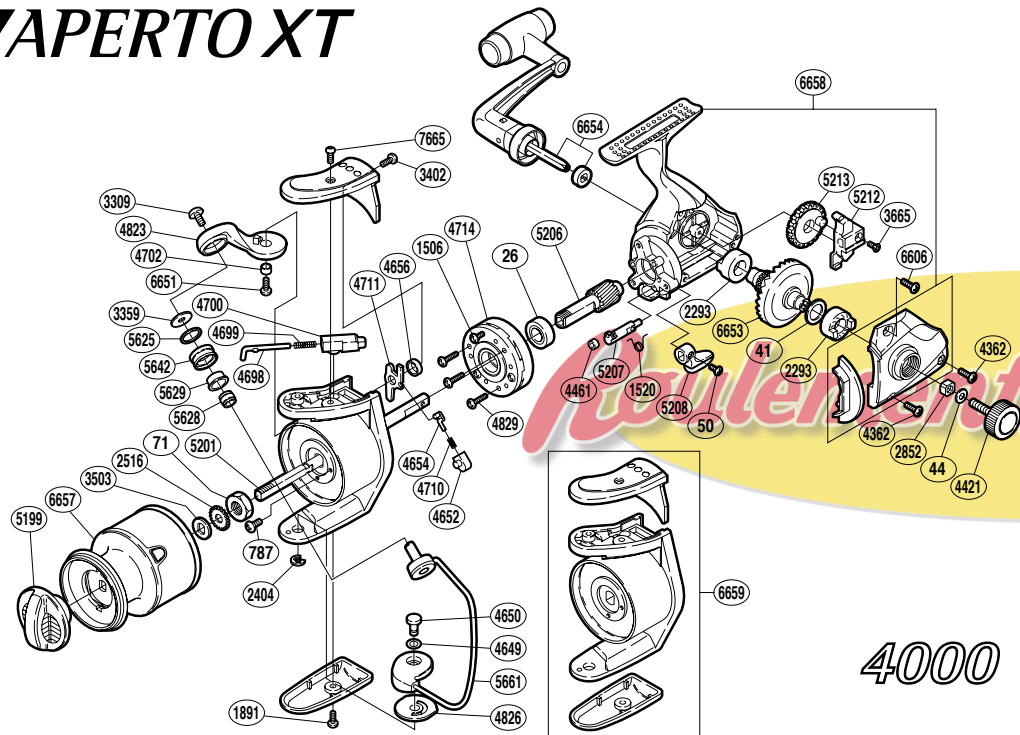

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4421	Handle Screw Cap	5206	Pinion Gear
0041	Drive Gear Washer	4649	Spacer	5207	Anti-Reverse Cam
0044	Handle Lock Washer	4650	Bail Hold Support Shaft	5208	Anti-Reverse Lever
0050	Anti-Reverse Lever Screw	4652	Lever Spring Guide (B)	5212	Oscillating Slider
0071	Rotor Nut	4654	Lever Spring Guide (A)	5213	Oscillating Gear
0787	Nut Lock Screw	4656	Trip Lever Spacer	5625	Line Roller Spacer
1506	Clutch Cover Screw	4661	Anti-Reverse Cam Ring	5628	Line Roller Collar
1520	Anti-Reverse Cam Spring	4698	Bail Spring Guide (A)	5629	Line Roller Bushing
1891	Bail Hold Support Guard Screw	4699	Bail Spring	5642	Line Roller
2293	Drive Gear Bushing	4700	Bail Spring Guide (B)	5661	Bail Assembly
2404	"E" Lock	4702	Bail Arm Bushing	6606	Side Cover Screw (short)
2516	Spool Support	4710	Lever Spring	6651	Bail Arm Screw
2852	Handle Screw Lock	4711	Bail Trip Lever	6653	Drive Gear
3309	Line Roller Screw	4714	Roller Clutch Assembly	6654	Handle Assembly
3359	Line Roller Washer	4823	Bail Arm	6657	Spool Assembly
3402	Bail Spring Cover Screw (small)	4826	Bail Hold Support Spacer	6658	Body Assembly
3503	Spool Washer	4829	Roller Clutch Screw	6659	Rotor Assembly
3665	Slider Retainer Screw	5199	Drag Knob	7665	Bail Spring Cover Screw (large)
4362	Side Cover Screw (long)	5201	Main Shaft		