


# APERTO XT

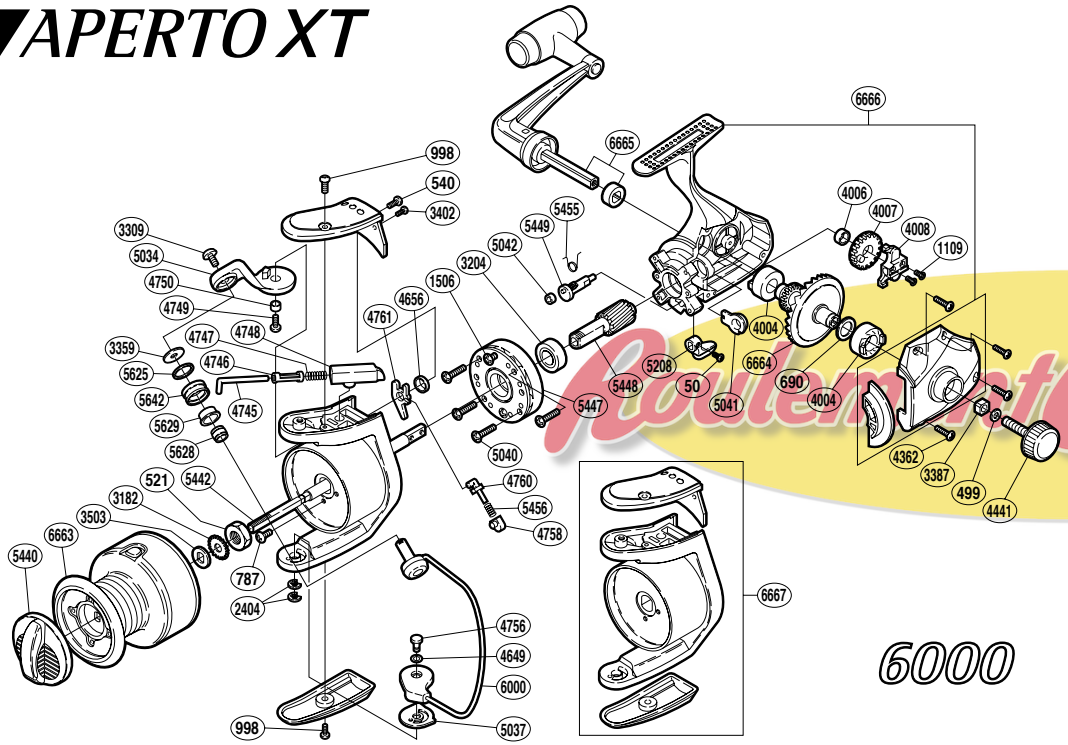

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0050	Anti-Reverse Lever Screw	4008	Oscillating Slider	5208	Anti-Reverse Lever
0499	Handle Lock Washer	4362	Side Cover Screw	5440	Drag Knob
0521	Rotor Nut	4441	Handle Screw Cap	5442	Main Shaft
0540	Bail Spring Cover Screw (large)	4649	Spacer	5447	Roller Clutch Assembly
0690	Drive Gear Washer	4656	Trip Lever Spacer	5448	Pinion Gear
0787	Nut Lock Screw	4745	Bail Spring Guide (A)	5449	Anti-Reverse Cam
0998	Multi-Purpose Screw	4746	Bail Spring Guide (A) Support	5455	Anti-Reverse Cam Spring
1109	Slider Retainer Screw	4747	Bail Spring	5456	Lever Spring
1506	Clutch Cover Screw	4748	Bail Spring Guide (B)	5625	Line Roller Spacer
2404	"E" Lock	4749	Bail Arm Screw	5628	Line Roller Collar
3182	Spool Support	4750	Bail Arm Bushing	5629	Line Roller Bushing
3204	Ball Bearing	4756	Bail Hold Support Shaft	5642	Line Roller
3309	Line Roller Screw	4758	Lever Spring Guide (B)	6000	Bail Assembly
3359	Line Roller Washer	4760	Lever Spring Guide (A)	6663	Spool Assembly
3387	Handle Screw Lock	4761	Bail Trip Lever	6664	Drive Gear
3402	Bail Spring Cover Screw (small)	5034	Bail Arm	6665	Handle Assembly
3503	Spool Washer	5037	Bail Hold Support Spacer	6666	Body Assembly
4004	Drive Gear Bushing	5040	Roller Clutch Screw	6667	Rotor Assembly
4006	Oscillating Gear Bushing	5041	Bushing		
4007	Oscillating Gear	5042	Anti-Reverse Cam Ring		