SYMETRE

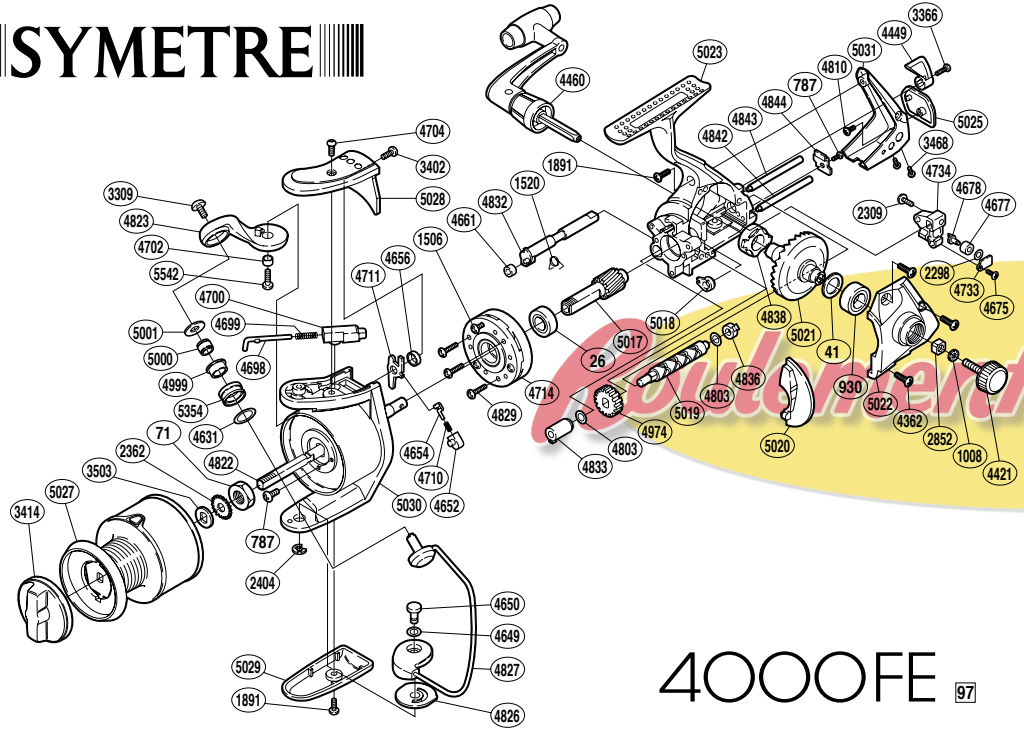

4000FE 97

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	4650	Bail Hold Support Shaft	4833	Worm Bushing (front)
0041	Drive Gear Washer	4652	Lever Spring Guide (B)	4836	Worm Bushing (rear)
0071	Rotor Nut	4654	Lever Spring Guide (A)	4838	Drive Gear Bushing
0787	Multi-Purpose Screw	4656	Trip Lever Spacer	4842	Oscillating Guide (A)
0930	Ball Bearing	4661	Anti-Reverse Cam Ring	4843	Oscillating Guide (B)
1008	Handle Lock Washer	4675	Oscillating Pawl Cover Screw	4844	Worm Shaft Retainer
1506	Clutch Cover Screw	4677	Oscillating Slider Bushing	4974	Idle Gear
1520	Anti-Reverse Cam Spring	4678	Oscillating Pawl	4999	Line Roller Bushing
1891	Multi-Purpose Screw	4698	Bail Spring Guide (A)	5000	Line Roller Collar
2298	Spacer	4699	Bail Spring	5001	Line Roller Washer
2309	Slider Retainer Screw	4700	Bail Spring Guide (B)	5017	Pinion Gear
2362	Spool Support	4702	Bail Arm Bushing	5018	Bushing
2404	“E” Lock	4704	Bail Spring Cover Screw (large)	5019	Worm Shaft
2852	Handle Screw Lock	4710	Lever Spring	5020	Side Cover Flange
3309	Line Roller Screw	4711	Bail Trip Lever	5021	Drive Gear
3366	Anti-Reverse Lever Screw	4714	Roller Clutch Assembly	5022	Side Cover
3402	Bail Spring Cover Screw (small)	4733	Oscillating Pawl Cover	5023	Body
3414	Drag Knob	4734	Oscillating Slider	5025	Rear Protector
3468	Rear Cover Screw (short)	4803	Worm Shaft Spacer	5027	Spool Assembly
3503	Spool Washer	4810	Rear Protector Screw	5028	Bail Spring Cover
4362	Side Cover Screw	4822	Main Shaft	5029	Bail Hold Support Guard
4421	Handle Screw Cap	4823	Bail Arm	5030	Rotor
4449	Anti-Reverse Lever	4826	Bail Hold Support Spacer	5031	Rear Cover
4460	Handle Assembly	4827	Bail Assembly	5354	Line Roller
4631	Spacer	4829	Roller Clutch Screw	5542	Bail Arm Screw
4649	Spacer	4832	Anti-Reverse Cam		

(080913)

EquipmentCasing.com