




# SPINNING REEL

# SABAYJ4000-JDM

Please order by parts number, not key number  
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

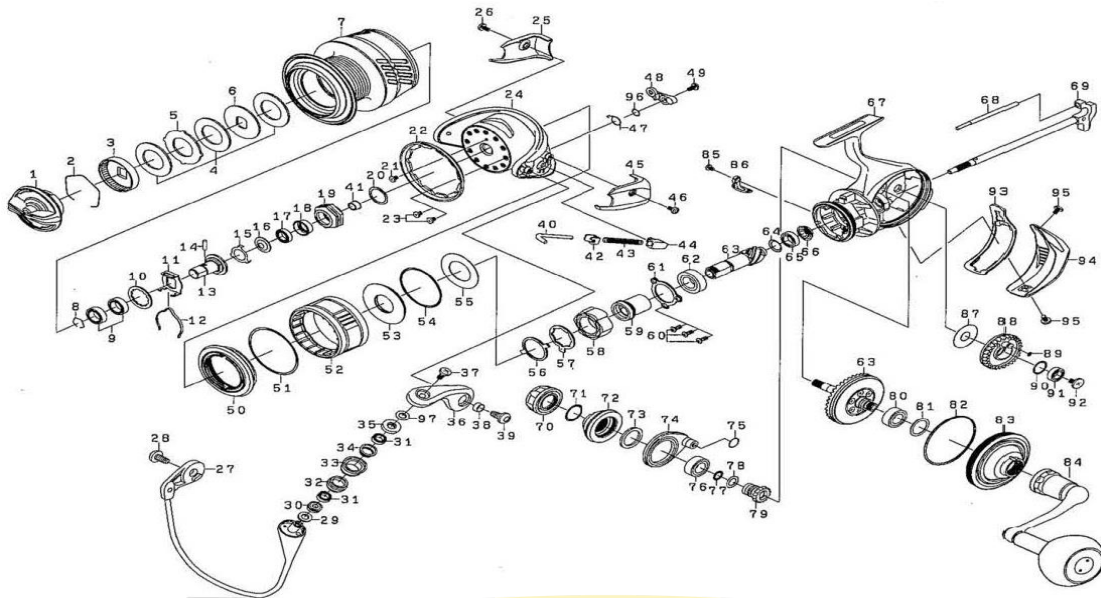

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J45-8401	DRAG KNOB	50	J30-1801	MAGSEAL COVER NUT
2	F71-0001	DRAG WASHER RET	51	H17-6501	O RING
3	F89-5305	DRAG KNOB CLICK PLATE	52	J30-1702	MAGSEALED CAP
4	J39-8801	ATD-DRAG WASHER KIT	53	H61-9301	MAGNET
5	F64-4702	KEY WASHER	54	H45-2801	O RING
6	G16-5903	EARED WASHER	55	H61-9201	WASHER
7	J45-7101	SPOOL ASSY / SABAYJ4000	56	H69-0201	CLUTCH CAM RETAINER
8	G52-5101	BEARING RET	57	J54-1901	CLUTCH CAM PLATE
9	G43-1004	BALL BEARING	58	G31-4501	ROLLER CLUTCH
10	G90-3902	SPOOL WASHER	59	H78-2302	SPACING SLEEVE
11	G69-4001	CLICK LEAF SPRING HOLDER	60	E13-4508	SCREW
12	H73-7101	LEAF SPRING	61	G52-2901	BEARING RET
13	J30-2801	SPOOL METAL	62	G52-2803	BALL BEARING
14	F64-3601	PIN	63	Z02-3235	PINION + DRIVE GEAR UNIT
15	G52-4801	BEARING RET	64	G57-8501	WASHER
16	H62-1501	PACKING	65	G52-2705	BALL BEARING
17	G21-2503	BALL BEARING	66	H61-8001	COLLAR
18	J30-2501	COLLAR	67	J45-4701	BODY / SABAYJ3500H-4000
19	J30-2401	ROTOR NUT	68	H63-9301	STABILIZER BAR
20	G64-5603	WASHER	69	J30-0601	MAIN SHAFT
21	H02-2701	LINE GUARD SCREW	70	J30-3301	HANDLE SCREW CAP
22	J30-2301	LINE GUARD RING	71	G16-2401	"O" RING
23	H02-2701	LINE GUARD SCREW	72	J45-5001	DRIVE BEARING COVER
24	J30-2101	ROTOR	73	J30-1301	COLLAR
25	J30-2201	SIDE COVER (A)	74	J30-0303	BODY SET PLATE
26	H43-1301	SCREW C	75	J30-0401	O RING
27	J45-5201	BAIL ASSY / SABAYJ3500-4000	76	J04-0001	BALL BEARING (MS)
28	H43-1201	SCREW	77	J18-5701	O-RING
29	B41-1703	WASHER (0.1MM)	78	G80-0701	O-RING
30	H74-3401	MAGNET COLLAR	79	J30-0501	OSCILATING GEAR PINION
31	G68-6903	BALL BEARING	80	J04-0001	BALL BEARING (MS)
32	H74-3701	COLLAR D	81	G64-5601	WASHER
33	H74-3801	LINE ROLLER	82	H50-2601	O RING
34	H74-3901	COLLAR C	83	J45-5103	BODY COVER
35	H74-4001	MAGNET COLLAR	84	J45-5501	HANDLE ASSEMBLY
36	H96-0121	ARM LEVER	85	H45-5407	SCREW
37	H74-4201	SCREW E	86	H90-6201	BAIL TRIP PLATE
38	H96-2401	COLLAR (A)	87	G64-4203	WASHER
39	H43-1201	SCREW D	88	J30-4201	OSC GEAR
40	H64-0601	BAIL SPRING SHAFT	89	B85-3101	O RING
41	J40-1401	COLLAR	90	G52-2101	OSC GEAR WASHER
42	H57-6101	BAIL SPRING PLATE	91	G46-7102	BALL BEARING
43	H64-0701	BAIL SPRING	92	H27-2202	SCREW
44	J08-9401	BAIL SPRING HOLDER	93	J30-1901	PACKING
45	H99-4601	COVER (A)	94	J30-2001	REAR COVER
46	H43-1301	SCREW C	95	H75-3302	SCREW
47	H41-3601	BAIL TRIP LEVER SPRING	96	J33-9502	WASHER (THICKNESS 0.1)
48	H99-4401	BAIL TRIP LEVER	97	J33-9502	WASHER (THICKNESS 0.1)
49	H41-7701	SCREW B			