


YAMAHA

SPINNING REEL

LUVIAS 2510PE-H

Please order by parts number, not key number
 Veuillez indiquer le numéro de la pièce (Non "Key" No.)

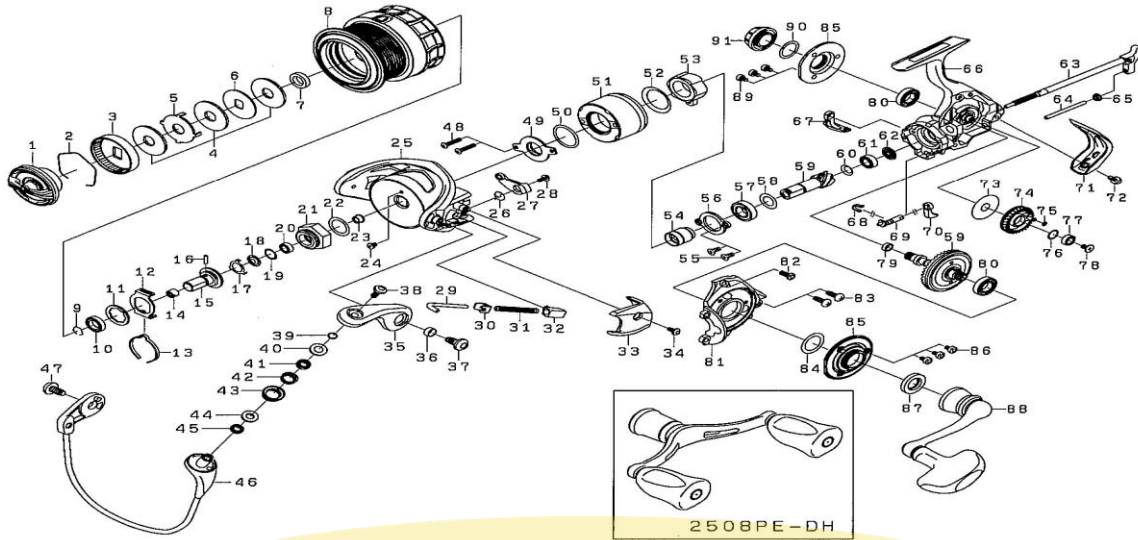

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	J21-7801	DRAG KNOB	47	H43-1201	SCREW
2	F71-0001	DRAG WASHER RETAINER	48	H59-6502	SCREW
3	F89-5307	DRAG KNOB CLICK PLT	49	H74-0901	MAGNET
4	H80-6501	DRAG WASHER	50	H74-1401	O RING
5	F63-5201	EARED WASHER	51	H74-0702	COVER
6	F63-5101	KEY WASHER	52	H97-9201	WASHER
7	H41-6301	DRAG COLLAR	53	H41-2601	ROLLER CLUTCH
8	J21-8801	SPOOL ASSEMBLY	54	H87-9601	SPACING SLEEVE
9	G47-2401	BEARING RETAINER	55	G99-7301	SCREW
10	G81-8902	BALL BEARING	56	H73-9101	BEARING RETAINER
11	H80-6300	WASHER	57	G27-9602	BALL BEARING
12	H41-6001	CLICK HOLDER	58	375-8500	WASHER
13	H41-6101	CLICK LEAF SPRING	59	Z02-1280	PINION + DRIVE GEAR UNIT
14	J18-0801	SPOOL METAL NUT	60	H81-4900	SPRING WASHER
15	H41-5901	SPOOL METAL	61	H73-8902	BALL BEARING
16	G37-5001	PIN	62	H41-1201	COLLAR
17	G47-1501	BEARING RETAINER	63	J18-0201	MAIN SHAFT
18	H41-5701	ROTOR NUT PACKING	64	H73-8701	STABILIZER BAR
19	G46-6103	WASHER	65	H73-8801	COLLAR
20	G46-6201	BALL BEARING	66	J21-7201	BODY
21	H80-5801	ROTOR NUT	67	H73-7801	BAIL TRIP PLT
22	371-2824	WASHER	68	H80-9201	A/R CAM SPRING
23	H85-4801	COLLAR	69	H73-8201	A/R CAM
24	H02-2701	SCREW	70	H41-0106	A/R LEVER
25	H96-0016	ROTOR	71	H83-6703	REAR COVER
26	H41-3601	BAIL TRIP LEVER SPRING	72	H83-6801	SCREW
27	J03-8501	BAIL TRIP LEVER	73	H60-7902	WASHER
28	H41-7701	SCREW	74	H73-8301	OSC GEAR
29	H41-4101	BAIL SPRING SHAFT	75	G68-3301	O RING
30	H57-6101	BAIL SPRING PLT	76	H12-9200	WASHER
31	H54-5701	BAIL SPRING	77	G46-9005	BALL BEARING
32	H41-4301	BAIL SPRING HOLDER	78	G99-7001	SCREW
33	H96-0201	COVER (A)	79	H45-5601	O RING
34	H43-1301	SCREW	80	H73-9703	BALL BEARING
35	H96-0104	BAIL ARM	81	H74-0108	SIDE COVER
36	H96-2401	COLLAR	82	351-1010	SCREW
37	H43-1201	SCREW	83	G99-7701	SCREW
38	H69-7701	SCREW	84	G46-8000	WASHER
39	H96-1001	COLLAR	85	J21-6001	BODY COVER (A)
40	H03-8301	PACKING	86	F62-3305	SCREW
41	G68-6903	BALL BEARING	87	H86-6201	PACKING
42	H96-0901	COLLAR	88	J21-9201	HANDLE ASSEMBLY
43	G68-6703	LINE ROLLER	89	G99-7503	SCREW
44	H96-0801	COLLAR	90	G39-9702	O RING
45	H96-0701	COLLAR	91	H74-5101	HANDLE SCREW CAP
46	H96-0301	BAIL ASSEMBLY			