


SPINNING REEL TOURNAMENT T-S3500i/T-S4000i

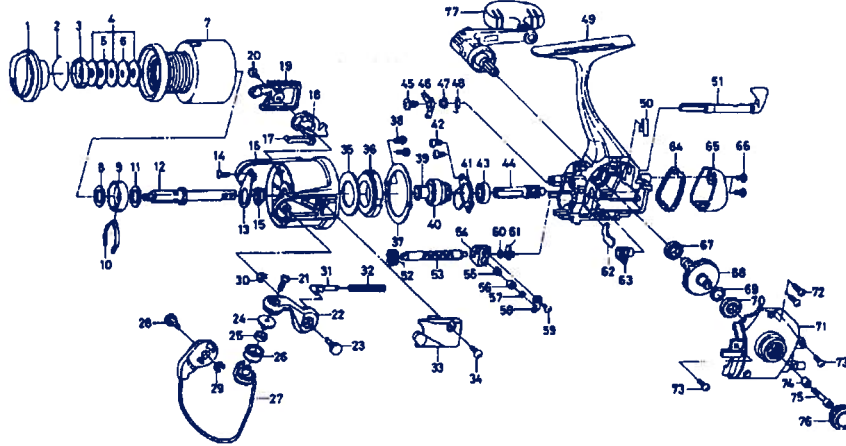

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
2-7	F18-4803	Spool assembly	43	635-4801	Ball bearing B
1	F18-4102	Drag knob	44	F18-1101	Pinion gear
2	F06-2601	Drag washer retainer	45	L00-1801	Anti-reverse pawl screw
3	E12-2801	Drag knob click plate	46	F18-1801	Anti-reverse pawl
4	B36-0204	Drag washer	47	F18-1701	Anti-reverse pawl collar
5	E15-0101	Eared washer	48	F37-4501	Anti-reverse pawl spring
6	B65-2302	Key washer	49	F30-7701	Body assembly
7	F18-4003	Spool assembly	50	E32-7801	Anti-reverse cam spring
8	E14-6503	Spool washer	51	F1B-1007	Anti-reverse lever
9	E12-2301	Click leaf spring holder	52	F30-7901	Worm gear
10	B74-7702	Spool click leaf spring	53	F30-7801	Worm shaft
11	371-2824	Main shaft washer	54	E37-6301	Oscillating slider
12	F18-3101	Main shaft	55	E19-1202	Oscillating pawl
13	F18-9601	Rotor nut holding plate	56	E19-1301	Oscillating pawl bush
14	B93-3001	Rotor nut holding plate screw	57	375-0801	Oscillating pawl washer
15	B10-5701	Rotor nut	58	E37-6901	Oscillating slider cover
16	F30-8001	Rotor	59	E40-1501	Oscillating slider cover screw
17	F08-0702	Bail trip plate	60	B53-6103	Worm shaft washer
18	F01-4401	Bail trip lever	61	F05-6901	Worm shaft collar
19	F18-2805	Bail trip cover	62	E48-2801	Shield plate
20	E33-0402	Bail trip cover screw	63	E48-2701	Pinion collar
21	B67-9306	Line roller screw	64	F18-3403	Water shield
22	F17-6506	Bail arm	65	F18-3501	Rear cover
23	F15-2501	Bail arm screw	66	E36-4202	Rear cover screw
24	F06-6301	Line roller collar	67	B86-1701	Ball bearing C
25	F05-5601	Ball bearing A	68	E44-7003	Drive gear
26	F30-5101	Line roller	69	373-7808	Drive gear washer
27	F30-8501	Bail assembly	70	E15-4001	Ball bearing D
28	F15-2501	Bail trip cam screw	71	F18-2301	Side cover
29	320-5901	Bail trip cam screw retainer	72	E15-8602	Side cover screw A
30	320-5901	Bail arm screw retainer	73	E15-7502	Side cover screw B
31	F24-6801	Bail spring shaft	74	F18-3701	Handle collar
32	E39-0601	Bail spring	75	F38-7101	Handle screw
33	F18-2505	Bail spring cover	76	F24-6201	Handle screw cap
34	E24-8101	Rail spring cover screw	77	F30-8801	Handle assembly
35	F19-7302	Oiled washer			
36	F18-2901	Roller clutch			
37	F18-3001	Roller clutch retainer			
38	E15-7502	Roller clutch retainer screw			
39	F18-1301	Spacing sleeve			
40	F18-1401	Anti-reverse ratchet			
41	F18-1201	Bearing retainer			
42	B83-4402	Bearing retainer screw			

T-S4000i Special Parts		
2-7	F18-4603	Spool assembly
7	F18-4703	Spool assembly
16	F30-9401	Rotor
27	F30-9501	Bail assembly