


# SHIMANO

SUSTAIN

SA-RB

SA-6000FE

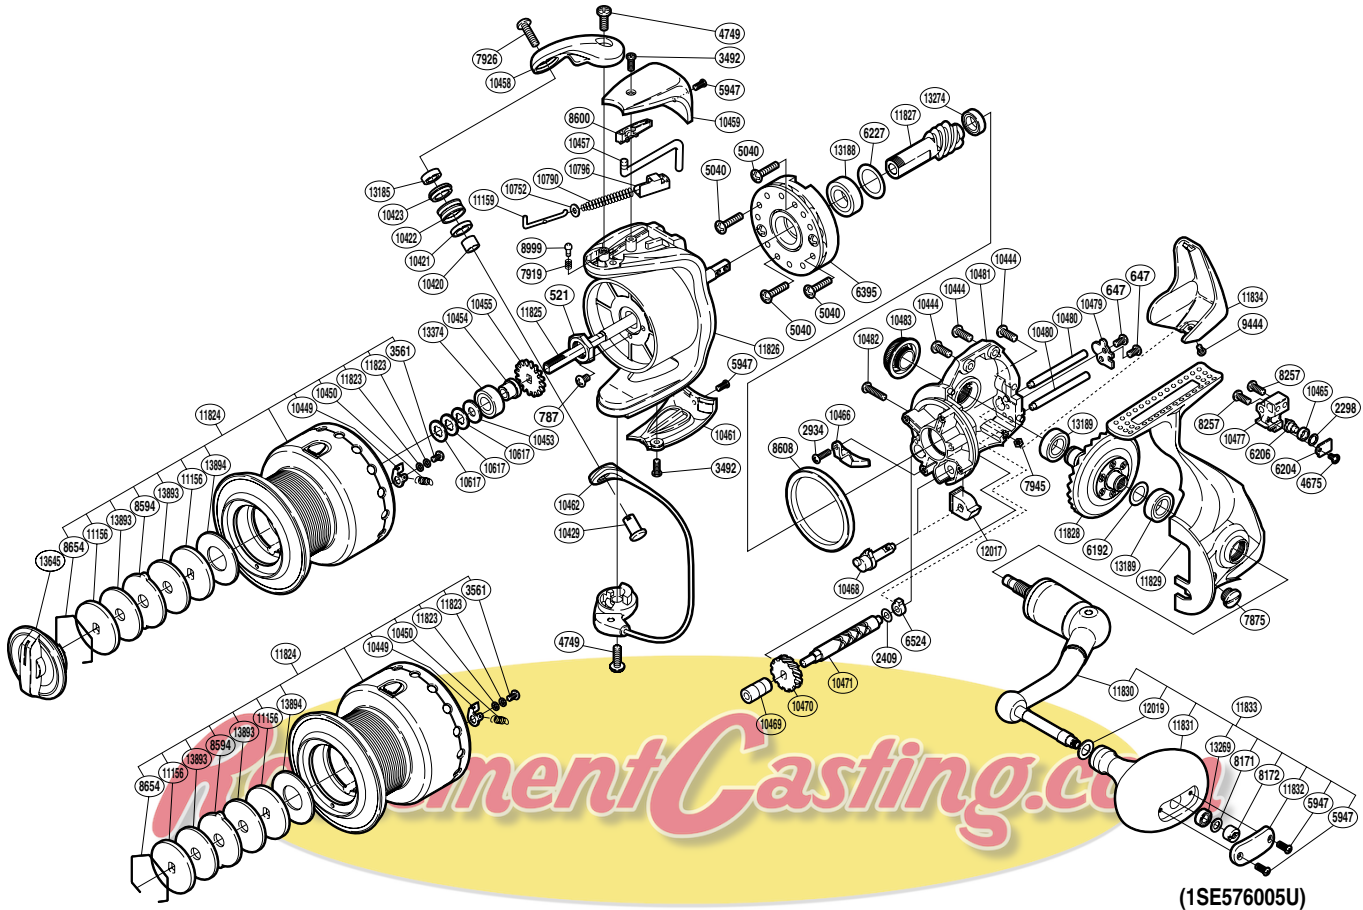

Part No.	Description	Part No.	Description	Part No.	Description
RD 0521	Rotor Nut	RD 9444	Screw	RD10752	Spring Guide A Support
RD 0647	Screw	RD10420	Bearing Spacer	RD10790	Bail Spring
RD 0787	Screw	RD10421	Line Roller Collar	RD10796	Bail Spring Seat
RD 2298	Spacer	RD10422	Line Roller	RD11156	Key Washer
RD 2409	Spacer	RD10423	Line Roller Bushing	RD11159	Bail Spring Guide A
RD 2934	Screw	RD10429	Line Roller Support	RD11823	Drag Click Collar
RD 3492	Screw	RD10444	Screw	RD11824	Spool Assembly
RD 3561	Screw	RD10449	Drag Click	RD11825	Main Shaft
RD 4675	Screw	RD10450	Click Spring	RD11826	Rotor
RD 4749	Screw	RD10453	Spool Support B	RD11827	Pinion Gear
RD 5040	Screw	RD10454	Bearing Bushing	RD11828	Drive Gear
RD 5947	Screw	RD10455	Spool Support	RD11829	Side Cover
RD 6192	Washer	RD10457	Bail Trip Lever	RD11830	Handle Shank Assembly
RD 6204	Oscillating Pawl Cover	RD10458	Bail Arm	RD11831	Handle Knob
RD 6206	Oscillating Pawl	RD10459	Bail Spring Cover	RD11832	Handle Knob I.D. Plate
RD 6227	Washer	RD10461	Rotor Side Cover	RD11833	Handle Assembly
RD 6395	Roller Clutch Assembly	RD10462	Bail Assembly	RD11834	Rear Protector
RD 6524	Worm Bushing (rear)	RD10465	Oscillating Slider Bushing	RD12017	Anti-Reverse Lever Cover
RD 7875	Oil Cap	RD10466	Bail Trip Strike	RD12019	Washer
RD 7919	Click Spring	RD10468	Anti-Reverse Cam	RD13185	Ball Bearing
RD 7926	Screw	RD10469	Worm Bushing (front)	RD13188	Ball Bearing
RD 7945	Nut	RD10470	Idle Gear	RD13189	Ball Bearing
RD 8171	Washer	RD10471	Worm Shaft	RD13269	Ball Bearing
RD 8172	Handle Knob Nut	RD10477	Oscillating Slider	RD13274	Ball Bearing
RD 8257	Screw	RD10479	Worm Shaft Retainer	RD13374	Ball Bearing
RD 8594	Eared Washer	RD10480	Oscillating Guide	RD13645	Drag Knob
RD 8600	Bail Trip Cover	RD10481	Body	RD13893	Drag Washer
RD 8608	Friction Ring	RD10482	Screw	RD13894	Drag Washer
RD 8654	Drag Washers Retainer	RD10483	Handle Screw Cap		
RD 8999	Click Pin	RD10617	Spool Washer		