


SHIMANO

STRADIC

ST-C3000XG

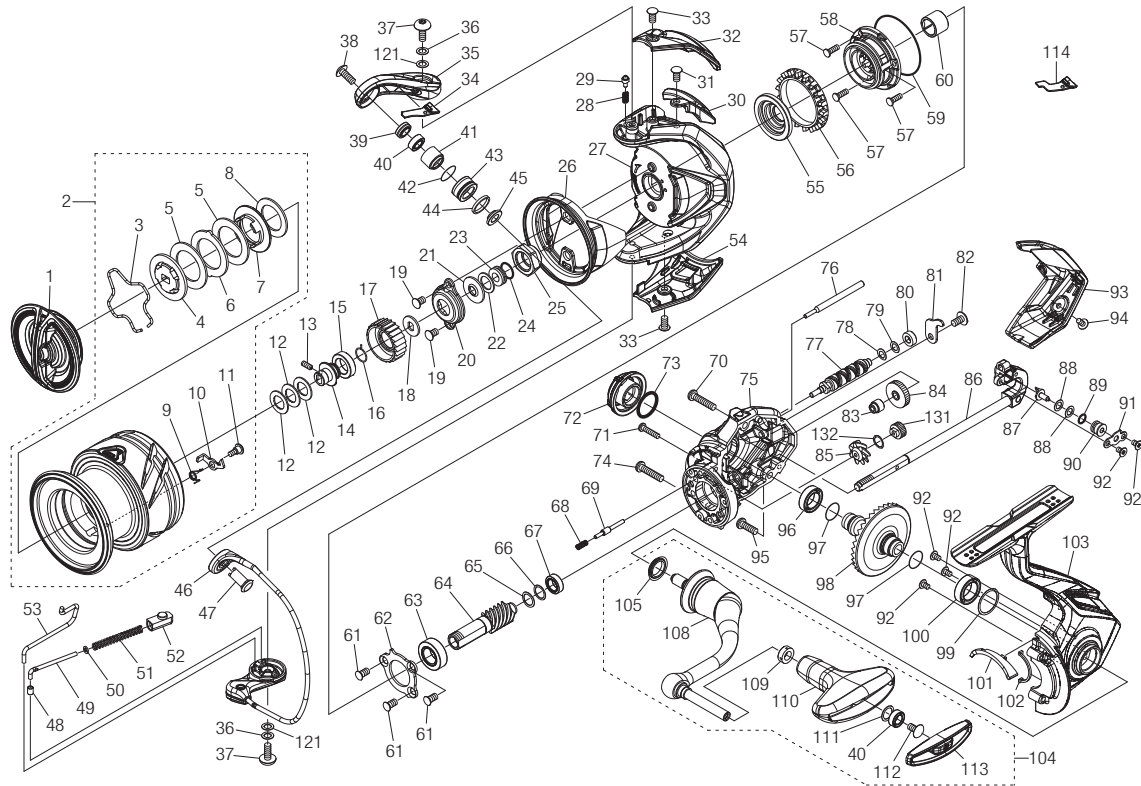

(51SF70EE39X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views.
(Adjustment will vary with each individual product.)

#	Part No.	RD No.	Description	#	Part No.	RD No.	Description	#	Part No.	RD No.	Description
1	14278		Drag Knob Assembly	42	1009E	19831	O Ring	83	1427Y		Bushing
2	1428Q		Spool Assembly	43	1009A	19959	Line Roller	84	10DK0	18744	Idle Gear
3	1427A		Retainer	44	10RFZ	19839	Spacer	85	148P1	22817	Idle Gear (Large)
4	10K3C	20994	Key Washer B	45	10QY7	22335	Bearing Spacer	86	141HD		Main Shaft Assembly
5	10R5H	22029	Drag Washer A	46	141HC		Bail Assembly	87	1018D	19807	Oscillating Pawl
6	1427B		Eared Washer	47	10TPC	17681	Line Roller Support	88	1070D	16796	Washer
7	10B9D	9910	Key Washer	48	1009B	19876	Bail Spring Guide A Bush	89	100WX	19780	O Ring
8	10R4W	22030	Drag Washer B	49	10SAN	19857	Bail Spring Guide A	90	1009L	19884	Oscillating Slider Bushing
9	10BQF	17183	Drag Click Spring	50	101D9	18724	Bail Spring Guide A Collar	91	10182	19818	Oscillating Pawl Cover
10	102H5	17184	Drag Click	51	105R6	17683	Bail Spring	92	1055H	19990	Screw
11	10A6F	14780	Screw	52	107AB	17684	Bail Spring Guide B	93	14280		Rear Protector
12	10BUB	20412	Spool Washer	53	1427L		Bail Trip Lever	94	10PRZ	17220	Screw
13	10PN3	17667	Set Screw	54	1427M		Bail Hold Support Guard	95	10L6D	13620	Screw
14	10THY	18206	Spool Bearing Bushing	55	101D5	18732	Rotor Ring	96	107FA	12969	Ball Bearing
15	10J3F	16122	Bushing	56	10QXQ	19883	Friction Ring	97	1009S	22066	O Ring
16	107V2	9833	Ratchet Spring	57	100WT	19777	Screw	98	1428T		Drive Gear
17	10SYS	18207	Drag Click Ratchet	58	10S2L	18735	Roller Clutch Assembly	99	1022D	22067	Washer
18	103PE	14867	Spool Support A	59	1009Z	19866	O Ring	100	10EX6	17629	Ball Bearing
19	103GW	19989	Screw	60	1009Y	19899	Roller Clutch Inner	101	14282		Bail Trip Strike
20	1076N	19926	Retainer	61	100WY	19775	Screw	102	1009W	19886	Flange Water Proof
21	1017W	19793	Bearing Water Proof	62	10DWD	19822	Bearing Retainer	103	141HP		Side Cover Assembly
22	100RU	21006	Washer	63	10DZB	19998	Ball Bearing	104	1428L		Handle Assembly
23	10RDL	19805	Main Shaft Collar	64	1428R		Pinion Gear	105	10PXV	17695	Handle Shaft Seal
24	10DXE	19781	O Ring	65	10SYU	18741	Washer	108	141HJ		Handle Shank Assembly
25	1427D		Rotor Nut	66	10HE5	19997	Washer	109	10PXZ	17698	Bushing
26	1427E		Rotor Brim	67	104JZ	13829	Ball Bearing	110	10R38	17493	Handle Knob
27	1427F		Rotor	68	1427P		Idle Gear Spring	111	104FH	19745	Washer
28	10HE7	20069	Click Spring	69	1427Q		Idle Gear Shaft	112	10LFA	17700	Screw
29	106ZC	17415	Click Pin	70	1427R		Screw	113	141NY		Handle Knob Seal
30	1427G		Counter Weight	71	145UB		Screw	121	10KFA	11166	Washer
31	103KS	4150	Screw	72	1427T		Handle Screw Cap	131	147W5	22816	Idle Gear (Small)
32	1427H		Bail Spring Cover	73	108WH	0582	O Ring	132	10TBA	19994	Washer
33	10PS2	17177	Screw	74	10LZ6	10482	Screw				
34	1427J		Bail Arm Fin	75	1427U		Body				
35	1427K		Bail Arm	76	1427V		Oscillating Guide				
36	10K96	18551	Washer	77	1427W		Worm Shaft				
37	10PS5	17197	Screw	78	10ECK	18199	Washer				
38	10K90	17374	Screw	79	10K9C	16801	Washer				
39	10187	19792	Collar	80	1009C	19976	Bushing				
40	104VX	13269	Ball Bearing	81	1427X		Worm Shaft Retainer				
41	1009K	19837	Bushing	82	10QG5	0647	Screw	114	14287		Bail Arm Fin (accessory)